


- ST-66407
- AIR CAULKING GUN (9" ALUM. PIPE), FOR CARTRIDGE
- ST-66407-11
- AIR CAULKING GUN (11" ALUM. PIPE), FOR CARTRIDGE
- ST-66407-13
- AIR CAULKING GUN (13" ALUM. PIPE), FOR CARTRIDGE

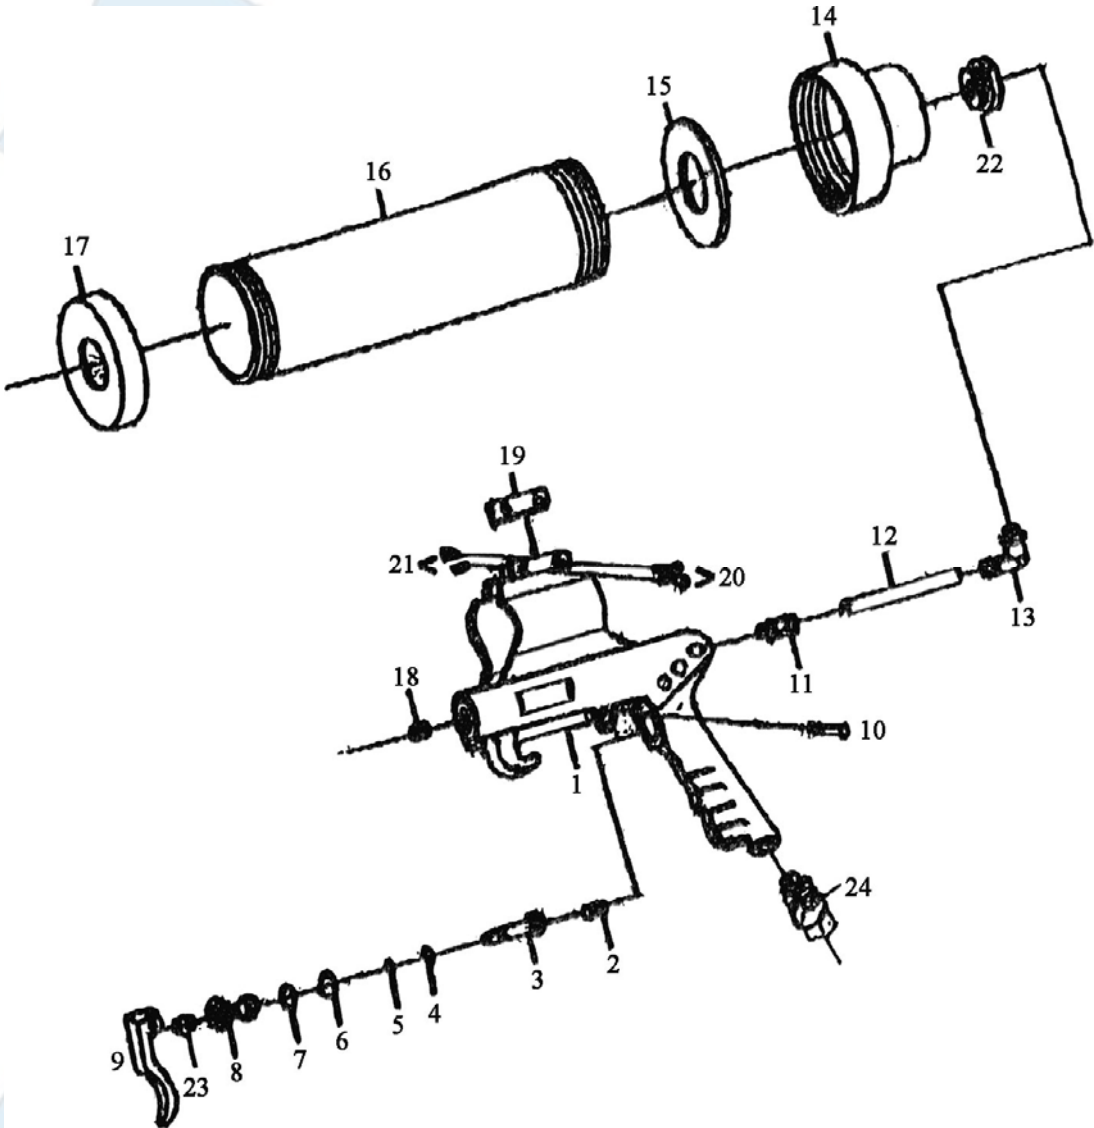

PARTS LIST

No.	Parts No.	Description	Q'ty
1	66407-01	Handle	1
2	66407-02	Spring	1
3	66407-03	Throttle Valve	1
4	66407-04	O-Ring	1
5	66407-05	O-Ring	1
6	66407-06	O-Ring	1
7	66407-07	O-Ring	1
8	66407-08	Valve Bushing	1
9	66407-09	Trigger	1
10	66407-10	Trigger Riveter	1
11	66407-11	Hose Q.C. Connector	1
12	66407-12A	Air Hose (9") [ST-66407]	1
	66407-12B	Air Hose (11") [ST-66407-11]	1
	66407-12C	Air Hose (13") [ST-66407-13]	1


No.	Parts No.	Description	Q'ty
13	66407-13	"L" Hose Q.C. Connector	1
14	66407-14	Tube Connector Cover	1
15	66407-15	Gasket	1
16	66407-16A	Alum. Tube (9") [ST-66407]	1
	66407-16B	Alum. Tube (11") [ST-66407-11]	1
	66407-16C	Alum. Tube (13") [ST-66407-13]	1
17	66407-17	Front Cover	1
18	66407-18	Set Screw	1
19	66407-19	Space	1
20	66407-20	Screw	2
21	66407-21	Nut	2
22	66407-22	Connector Cover Nut	1
23	66407-23	Throttle Valve Cap	1
24	66407-24	Air Regulator	1

ST-66407 Air Caulking Gun

Instruction for use the Cartridge



1. Cut tip off

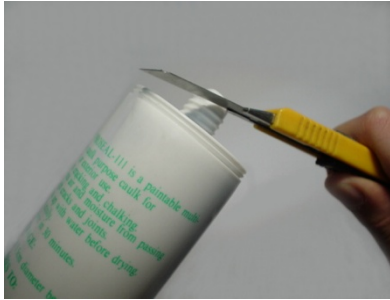

2. Attach nozzle



3. Cut the nozzle that you need




4. Pull the piston back to button



5. Pull the piston back to button



6. Replace Threaded retaining collar on tube

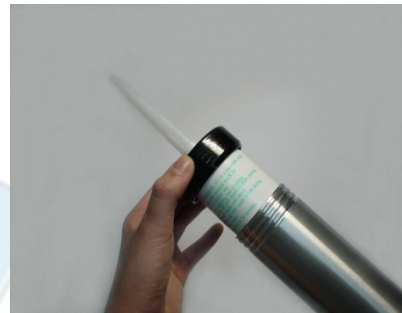

7. Use the wrench secure the nipple



8. Attach air supply to applicator



Warning: Never exceed 90PSI (6 Bar) when using caulking gun

