SUMAKE®

RW26 series TOOL TROLLY

Please read these instructions carefully

Roller cabinets:

- The roller cabinets feature a rotating cam lock mechanism controlled by a key.
- When locked, hooks engage in each drawer to prevent them from being opened.
- When unlocked the hooks disengage, allowing the drawers to be opened.
- If the cabinet is locked while the drawer are still open, simply close the drawers to lock them.

Caster and side tray:


Use the included screws to attach the two heavy-duty fixed caster(3A) and two heavyduty swivel caster with brakes(3B) as shown in the diagram. The side handle/tool tray(3C) must be attached to the same side as the swivel caster.

Removal/reinstallation of drawers:

- To remove, pull drawer fully open. Push in the plastic tabs(4) on both sides to release drawer from the slides. Pull the drawer out.
- To re-install, line up the drawer sides, engage, and close the drawer completely.

Lubrication

To ensure smooth operation of the slides, lubricate them periodically with a light grease or petroleum jelly. Do this at lest twice a year or more, depending on the frequency of use.

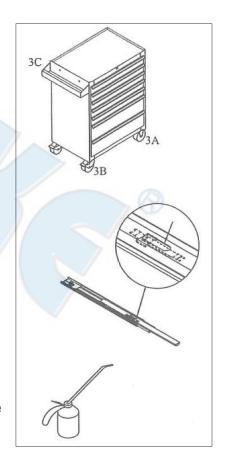

Loading capacity

For example: RW2607A

