

T2800 3 SHELF TROLLEY

Instructions

1. Caster installation

Using #10 bolts #12 washer and #11 hex nuts for casters, attach #5 two fixed casters assemblies to the #2 bottom shelf at one end, and #6 two swivel. Caster at the other end

2. Pillars

Using #7 carriage bolt and #9 hex nut to loosely secure the #4 pillars to the bottom tray.

Repeat 4 comers with same carriage bolt and hex nut

3. Middle tray

Using #7 carriage bolt and #9 hex nut to loosely secure the #4 pillars to the bottom tray

Repeat 4 comers with the same carriage bolt and hex nut

4. Top tray

Using #7 carriage bolt and #9 hex nut to loosely secure the #4 pillars to the top tray

Repeat 4 comers with the same carriage bolt and hex nut.


5. Installing the handle

Install the handle on the side where you have the swivel caster in place


Use #8 hex bolt and #9 hex nut to fasten the Handle onto the trolley

6. Once all of the components are in place, you can now tighten all of the loose bolts.


STEP 1

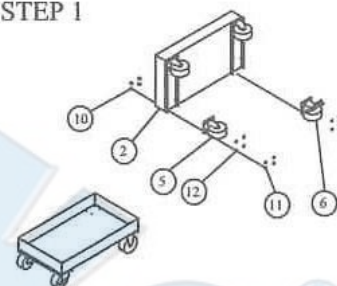

STEP 2

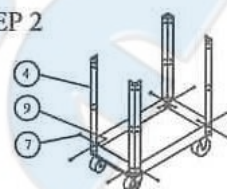


STEP 3

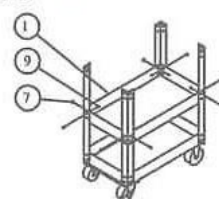


STEP 4

Top Tray can
Upward used and downward used

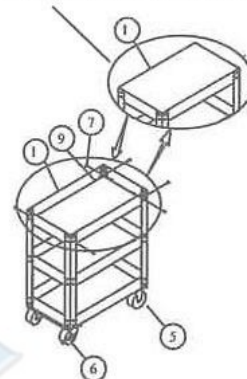


STEP 5

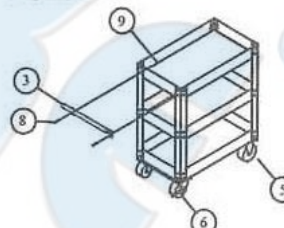

T2800

3 SHELF TROLLEY

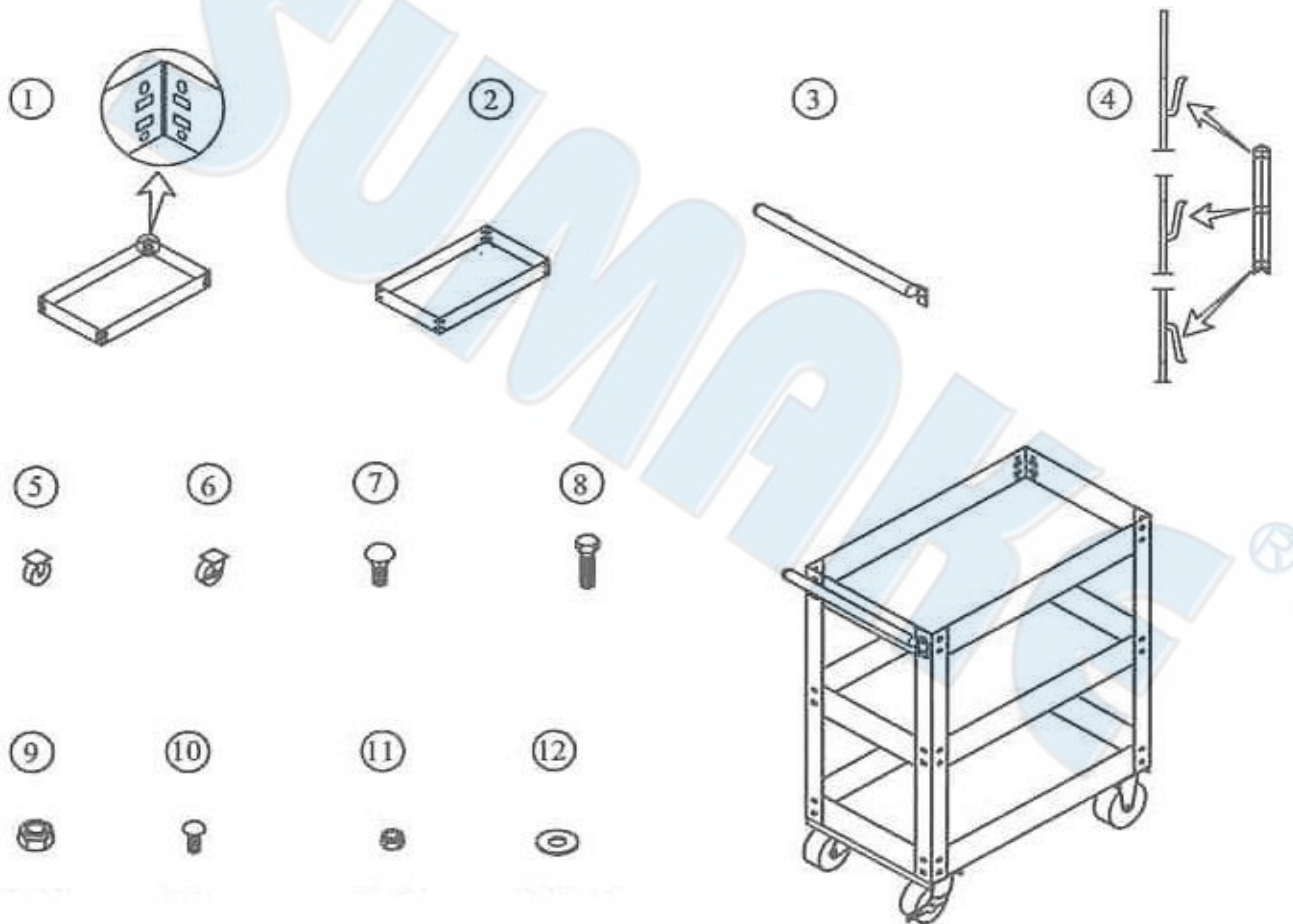

PARTS LIST

No.	Description	Q'ty
1	Top & Middle Tray	2
2	Bottom Tray	1
3	Handle	1
4	Pillar	4
5	Fixed Caster	2
6	Swivel Caster	2
7	Carriage Bolt For Pillar	22
8	Hex Bolt For Handle	2
9	Hex Nut	24
10	Bolt For Caster	16
11	Hex Nut For Caster	16
12	Washer For Caster	16

T2800-P-2411A-EM

Carefully unpack and spread out all parts in large uncluttered area.
Familiarize yourself with all parts and compare them with the drawing below to make sure none are missing.
Read all assembly instructions before beginning