




SUMAKE *PNEUMATIC TOOLS*

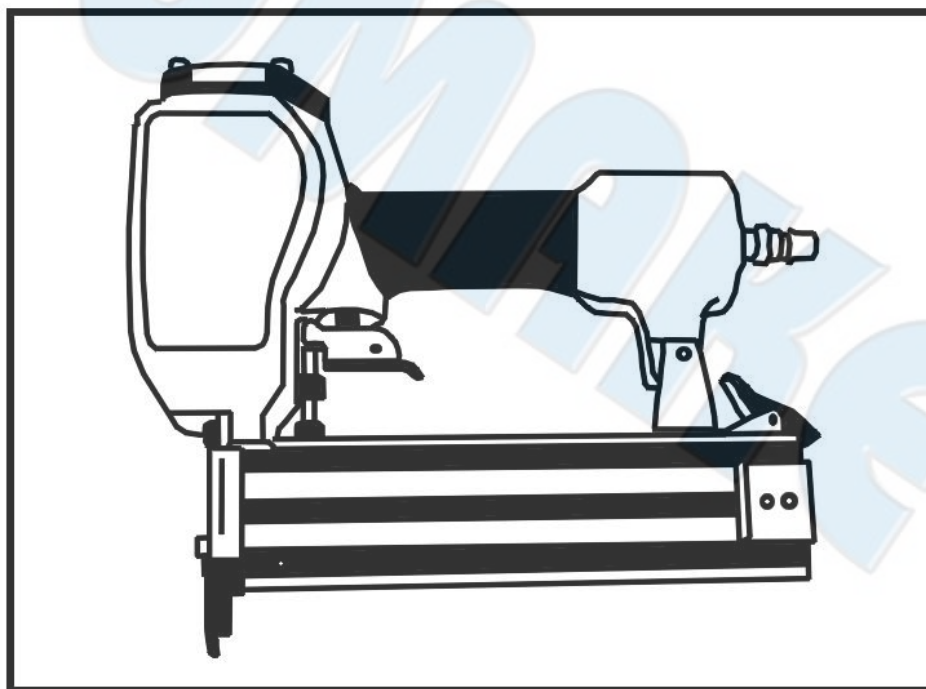

Medium Wire Finish Nailer Extension Magazine Seat/ Two Line Of Nails F1.8/50N-K

Specification:

Tool Length	12" (305mm)
Tool Height	9.17" (233mm)
Tool Width	2.9" (73mm)
Air Inlet	1/4" (6.35 mm)
Air Pressure	6 ~ 8kg/cm ³
Net Weight	4.41 lbs (2.0 kg)
Nail Length (S. Brad Type)	15 ~ 50mm
Load Capacity	100pc

Noise and Vibration:

Vibration ISO 8662-11	Noise EN 12549	Remark
No Load: 3.4 m/s ² Uncertainty K= 1.5 m/s ²	Sound Pressure Level load: 96 dB(A)	Please always wear ear protector at environment noise level > 80 dB(A) due to risk of impaired hearing!
	Sound power level load: 107 dB(A)	
	Uncertainty K= 3dB	

SUMAKE INDUSTRIAL CO., LTD

4F,NO.351,Yangguang St.,Neihu District TAIPEI, TAIWAN, ZIP:114-91

F1.8/50N-K-S-2504C-PUF



EC DECLARATION OF CONFORMITY

We: **SUMAKE INDUSTRIAL CO., LTD.**

4F, No. 351, Yangguang St., Neihu District, Taipei City, Taiwan

declare in sole responsibility that the equipment

Equipment : **MEDIUM WIRE FINISH NAILER EXTENSION
MAGAZINE SEAT / TWO LINE OF NAILS**

Model/ Serial No. : **F1.8/50N-K**

to which this declaration applies, complies with these normative documents:

- Machinery Directive: 2006/42/EC

and conforms to the following EN standard,

- EN ISO 12100: 2010
- EN ISO 11148-13:2018

Name and Signature/Position

Mike Su – Managing Director

Date and Place

2024/12/9

Taipei, Taiwan

F1.8/50N-K-D-2504D-PUF

TOOL SPECIFICATIONS

MODEL OF TOOL	F1.8/50N-K
TOOL LENGTH	12" (310mm)
TOOL HEIGHT	9.17" (233mm)
TOOL WIDTH	2.9" (73mm)
WEIGHT(WITHOUT FASTENERS)	4.41bs (2.0kg)
AIR INLET	1/4" NPT
COMPRESSED AIR:	
Maximum permissible operating pressure	110 PSIG (7.5 bar)
Recommended operating pressure range	60 ~ 100 PSIG (4 ~ 7 bar)
AIR CONSUMPTION	2.72 scfm with 25 Pins per minute @ 90 psi (6.2 bar)

NOISE CHARACTERISTIC VALUES IN ACCORDANCE WITH EN 12549:99
A-weighted single-event sound pressure level at operator's position : LpA,1s = 96 dBA
A-weighted single-event sound power level : LwA,1s = 102 dBA
Peak C-weighted sound pressure level : LpC,peak = 120 dBA
(※ AT THE WORKPLACE, ALWAYS WEAR HEARING PROTECTION EQUIPMENT ※)

VIBRATION CHARACTERISTIC VALUES IN ACCORDANCE WITH ISO 8662-1:99


Weighted root mean square acceleration = 3.4 m/s²

FASTENER LENGTHS 15 ~ 50 mm (B.W.G. NO.18)


LOAD CAPACITY 100 pcs



Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.



Alerts the operator to useful information.

CONTACT SAFETY TRIP MECHANISM

OPERATING A CONTACT SAFETY TRIP TOOL :

- The operator requires finger to be off the trigger and the nose of the tool to be placed on the workplace.
- The contact safety trip mechanism is then depressed against the workplace and the trigger is pulled to drive a fastener.
- The trigger is released after each fastener is driven.
- Move the tool to next location and the above procedure repeated.

CHECKING OPERATION OF CONTACT SAFETY TRIP MECHANISM:

- Disconnect the air supply from the tool.
- Empty the magazine.
- Make sure the trigger and contact safety trip mechanism move up and down without any sticking.
- Connect air supply to the tool.
- Depress the contact safety trip mechanism against the workplace without pulling the trigger. The tool must not cycle. Never use the tool if a cycle occurs.
- Hold the tool clear of the workplace. The contact safety trip mechanism should return to its original down position. Pull the trigger. The tool must not cycle. Never use the tool if a cycle occurs.
- Depress the contact safety trip mechanism again the workplace and pull the trigger, the tool must cycle.

SAFETY INSTRUCTIONS



- Read this manual and understand all safety instructions before operation the tool. If you have any questions, please contact our authorized representatives.
- Only those fasteners listed in the operating instructions may be used in the fastener driving tools.
- Only the main energy and the lubricants listed in the operating instructions may be used.
- Fastener driving tools marked with an inverted equilateral triangle standing on one point may only be used with an effective safety yoke.
- Fastener driving tools equipped with contact actuation or continuous contact actuation, marked with the symbol "Do not use on scaffoldings, ladders", shall not be used for specific application for example:
 - when changing one driving location to another involves the use of scaffoldings, stairs, ladders, or ladder alike constructions, e.g. roof laths,
 - closing boxes or crates,
 - fitting transportation safety systems e.g. on vehicles and wagons.
- For the maintenance of fastener driving tools, only spare parts specified by the manufacturer or his authorized representative shall be used.
- Repairs shall carried out by agents authorized by the manufacturer or by other specialists, having due regard to the information given in the operating instruction.
- Stands for mounting the fastener driving tools to a support for example a work table shall be designed and constructed by the stand manufacturer in such a way that the fastener driving tool can be safely fixed for the intended use, thus for example avoiding damage, distortion or displacement.
- Fastener driving tools operated by compressed air shall only be connected to compressed air lines where the maximum allowable pressure cannot be exceed by a factor of more than 10%, which can for example be achieved by a pressure reduction valve which includes a downstream safety valve.
- When using fastener driving tools operated by compressed air, particular attention must be paid to avoid exceeding the maximum allowable pressure.
- When using fastener driving tools operated by compressed air should only be operated at the lowest pressure required for the work process at hand, in order to prevent unnecessarily high noise levels, increased wear and resulting failures.
- Hazards caused by fire and explosion when using oxygen or combustible gases for operating compressed air operated fastener driving tools.
- Carry the fastener driving tool at workplace using only the handgrip, and never with the trigger actuated. Never carry the tool by the hose or pull the hose to move the tool.





LOADING THE TOOL



- Do not place your hand or any part of your body in the fastener discharge area of the tool when connecting or disconnecting air supply.




- Never point any operational fastener driving tool at yourself or at any other person.



- Disconnect air hose.
- Depress the magazine latch. Pull back on the magazine cover.
- Insert a stick of fasteners into the magazine. Make sure the pointed ends of the fasteners are loaded with the points downward. Also make sure fasteners are not dirty or damaged.
- Push the magazine cover forward until the latch catches.


SAFETY INSTRUCTIONS (continued)



- Disconnect the tool from air supply before cleaning, jamming, servicing, adjusting, and during non-operation.



- Wear eye protection.



- Do not use a check valve or any other fitting which allows air to remain in the tool.



- Do not place your hand or any part of your body in the fastener discharge area of the tool when connecting or disconnecting air supply.



- Never point tool at yourself or at any other person.

OPERATING THE TOOL







- Protect your eyes and ears. Wear z87.1 safety glasses with side shields. Wear hearing protection. Employers and users are responsible for ensuring the user or anyone near the tool wear this safety protection.



- Check and replace any damaged or worn components on the tool. The safety warning labels on the tool must also be replaced if they are not legible.

- Add a few drops of UNOCAL RX22 or 3-in-1 oil into the air inlet. (See Fig. 1)
- Attach a high flow quick connect fitting to the tool. (See Fig. 2)
- Empty the magazine.
- Connect the tool to an air compressor using a 3/8" I.D. hose. Make sure the hose has a rated working pressure exceeding 200 PSI (13.8 bar) and a female quick coupler. (See Fig. 3)
- Regulate the air pressure to obtain 70 PSI (4.8 bar) at the tool. (See Fig. 4)
- Disconnect the air supply from the tool.
- Load fasteners into your tool following the instructions in this manual. (See Fig. 5)
- Reconnect the air supply to the tool.
- Test for proper fastener penetration by driving nails into a sample piece of wood. If the fasteners do not achieve the desired penetration, adjust the air pressure to a higher setting until the desired penetration is achieved. Do not exceed 110 PSI (7.6 bar) at the tool. (See Fig. 6)



LUBRICATION AND MAINTENANCE



- Disconnect the air supply from the tool before lubricating.



- Your tool requires lubrication before you use it for the first time.



- Wipe off excessive oil at the exhaust. Excessive oil will damage O-rings of tool. If in-line oiler is used, manual lubrication through the air inlet is not required on a daily basis.



- Turn the tool so the inlet is facing up and put one drop of high speed spindle oil, UNOCAL RX22, or 3-IN-1 oil into air inlet. Never use detergent oil or additives. Operate the tool briefly after adding oil.

AIR SUPPLY AND CONNECTIONS



- Many air tool users find it convenient to use oiler to help provide oil circulation through tool and increase the efficiency and useful life of the tool. Check oil level in the oiler daily.




- Many air tool user find it convenient to use a filter to remove liquid and impurities which can rust or wear internal parts of the tool. A filter also increase the efficiency and useful of the tool. The filter must be checked on a daily basis and if necessary drained.




- For better performance, install a 3/8" quick connector (1/4" NPT threads) with an inside diameter of .315" on your tool and a 3/8" quick coupler on the air hose.

The following illustration shows the correct mode of connection to the air supply system which will increase the efficiency and useful life of the tool.



CLEARING A JAM FROM THE TOOL



- Disconnect the tool from air compressor before adjusting, clearing jams, servicing, relocating and during non-operation.



- Fastener jammed in fastener discharge area:
 - Disconnect tool from air hose.
 - Grab jammed fastener with pliers and remove.



- Fastener jam inside magazine:
 - Disconnect air tool from air hose.
 - Pull back on fastener pusher until unlocked.
 - Removed jammed fastener.
 - Release fastener pusher.

CLEANING THE TOOL



- Never use gasoline or other flammable liquids to clean the tool. Vapors in the tool will ignite by a spark and cause the tool to explode and result in death or serious personal injury.



- Solvents used to clean the nose of the tool and contact safety trip mechanism may soften the bar on the shingles and cause the buildup to be accelerated. Make sure to dry the tool thoroughly after cleaning and before operating the tool again.




- Disconnect the air supply from the tool.



- Remove tar buildup with kerosene #2 fuel oil or diesel fuel. Do not allow solvent to get into the cylinder or damage may occur. Dry off the tool completely before use.



F1.8/50N MEDIUM WIRE FINISH NAILER EXTENSION MAGAZINE SEAT / TWO LINE OF NAILS (BLOW CASE)

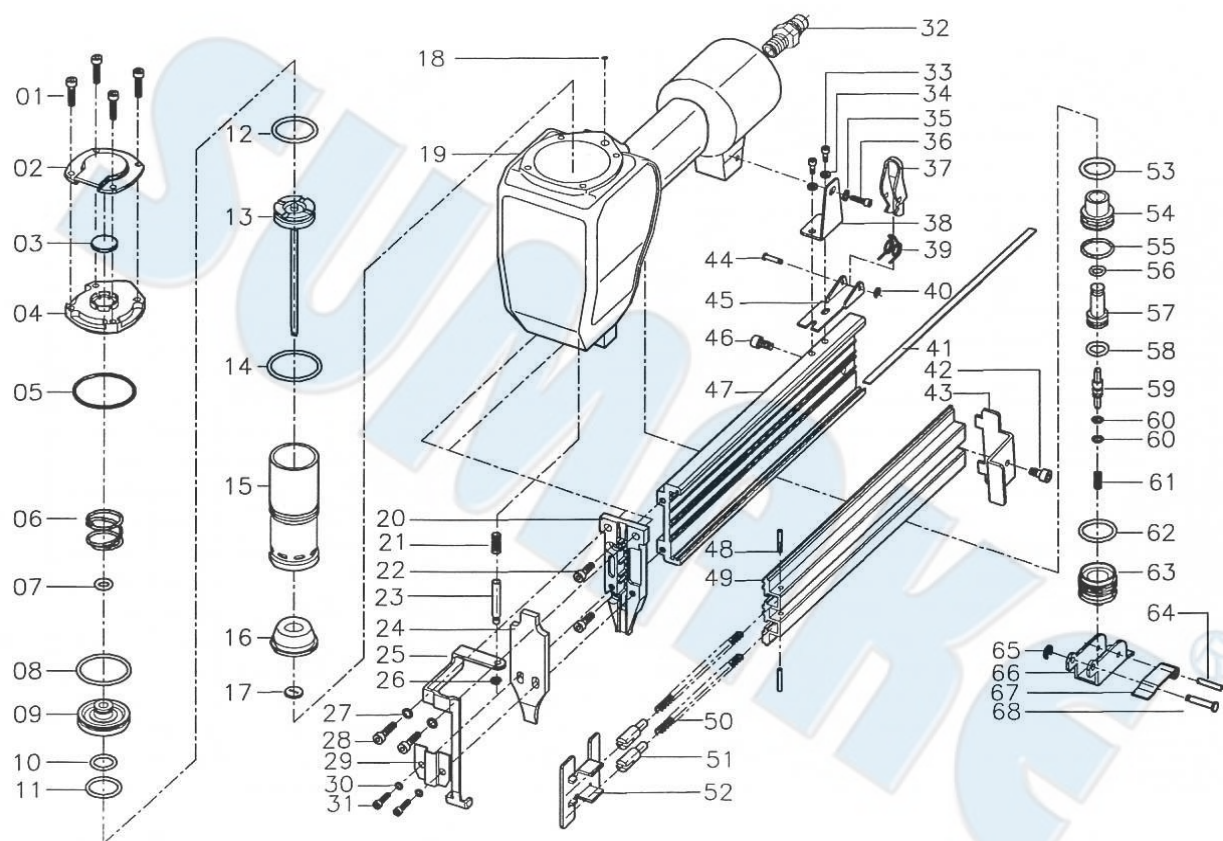

PARTS LIST

No.	Parts No.	Description	Q'TY
1	F1.8/50N-01	Hex. Soc. Hd. Screw	1
2	F1.8/50N-02	Deflector Cap	1
3	F1.8/50N-03	Top Seal	1
4	F1.8/50N-04	Cap	1
5	F1.8/50N-05	O-Ring	1
6	F1.8/50N-06	Compression Spring	1
7	F1.8/50N-07	O-Ring	1
8	F1.8/50N-08	O-Ring	1
9	F1.8/50N-09	Head Valve	1
10	F1.8/50N-10	O-Ring	1
11	F1.8/50N-11	O-Ring	1
12	F1.8/50N-12	O-Ring	1
13	F1.8/50N-13	Piston Ram Assembly	1
14	F1.8/50N-14	O-Ring	1
15	F1.8/50N-15	Cylinder	1
16	F1.8/50N-16	Bumper	1
17	F1.8/50N-17	Driver Guide	1
18	F1.8/50N-18	O-Ring	1
19	F1.8/50N-19	Gun Body	1
20	F1.8/50N-20	Nose	1
21	F1.8/50N-21	Safety Spring	1
22	F1.8/50N-22	Hex. Soc. Hd. Screw	1
23	F1.8/50N-23	Safety Rod	1
24	F1.8/50N-24	Nose Cover	1
25	F1.8/50N-25	Safety	1
26	F1.8/50N-26	E-Ring	1
27	F1.8/50N-27	Hex. Soc. Hd. Screw	1
28	F1.8/50N-28	Hex. Soc. Hd. Screw	1
29	F1.8/50N-29	Safety Guide	1
30	F1.8/50N-30	Hex. Soc. Hd. Screw	1
31	F1.8/50N-31	Hex. Soc. Hd. Screw	1
32	F1.8/50N-32	Air Plug	1
33	F1.8/50N-33	Hex. Soc. Hd. Screw	1
34	F1.8/50N-34	Hex. Soc. Hd. Screw	1

No.	Parts No.	Description	Q'TY
35	F1.8/50N-35	Hex. Soc. Hd. Screw	1
36	F1.8/50N-36	Hex. Soc. Hd. Screw	1
37	F1.8/50N-37	Latch	1
38	F1.8/50N-38	Support Bracket	1
39	F1.8/50N-39	Latch Spring	1
40	F1.8/50N-40	E-Ring	1
41	F1.8/50N-41	Magazine Steel Plate	1
42	F1.8/50N-42	Hex. Soc. Hd. Screw	1
43	F1.8/50N-43	Magazine Bracket	1
44	F1.8/50N-44	Stepped Pin	1
45	F1.8/50N-45	Latch Bracket	1
46	F1.8/50N-46	Hex. Soc. Hd. Screw	1
47	F1.8/50N-47	Magazine	1
48	F1.8/50N-48	Pin	1
49	F1.8/50N-49	Magazine Cover	1
50	F1.8/50N-50	Magazine Spring	1
51	F1.8/50N-51	Magazine Shaft	1
52	F1.8/50N-52	Pusher	1
53	F1.8/50N-53	O-Ring	1
54	F1.8/50N-54	Trigger Valve Head	1
55	F1.8/50N-55	O-Ring	1
56	F1.8/50N-56	O-Ring	1
57	F1.8/50N-57	Trigger Valve Stem	1
58	F1.8/50N-58	O-Ring	1
59	F1.8/50N-59	Trigger Valve Guide	1
60	F1.8/50N-60	O-Ring	1
61	F1.8/50N-61	Trigger Spring	1
62	F1.8/50N-62	O-Ring	1
63	F1.8/50N-63	Trigger Valve Stem	1
64	F1.8/50N-64	Spring Pin	1
65	F1.8/50N-65	E-Ring	1
66	F1.8/50N-66	Primary Trigger	1
67	F1.8/50N-67	Secondary Trigger	1
68	F1.8/50N-68	Stepped Pin	1