




SUMAKE *PNEUMATIC TOOLS*

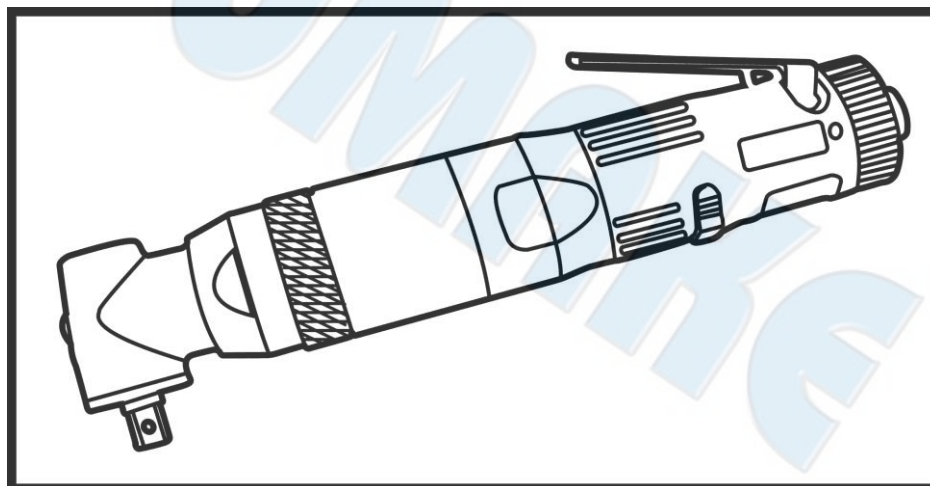

3/8" Square Drive Auto Shut Off Oil Pulse Wrench (Angle Type) -High Pressure Tool IPW-2315A

Specification:

Free Speed	6,000 r/min
Square	3/8
Bolt Capacity	6~8 mm
Torque	4.4~11.1 ft-lb (6~15 Nm)
Overall Length	10.16" (258mm)
Air Consumption	8.8 CFM (252 L/min)
Air Inlet (PT)	1/4" (6.35 mm)
Air Hose (I.D.)	6.5 mm
Air Pressure	72.5~87 psi (5~6 bar)
Net Weight	2.98 lbs (1.35 kg)

Noise and Vibration:

Vibration EN ISO 28927-2	Noise EN ISO 15744	Remark
Load: 2.3 m/s ² Uncertainty K= 1.5 m/s ²	Sound Pressure Level load: 75 dB(A)	Please always wear ear protector at environment noise level > 80 dB(A) due to risk of impaired hearing!
	Sound power level load: 86 dB(A)	
	Uncertainty K= 3dB	

SUMAKE INDUSTRIAL CO., LTD

4F,NO.351,Yanguang St.,Neihu District TAIPEI, TAIWAN, ZIP:114-91

IPW-2315A-S-2005B-C5F

SUMAKE®

OIL PULSE TOOL



IPS(W)-I-1709D-C5

OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT



WARNING

Read and carefully observe these operating instructions before unpacking and operating the tool! The tool must be operated, maintained and repaired exclusively by persons familiar with the operating instructions. Local safety regulations regarding installation and maintenance must be followed.



INSTALLING TOOL

- For safety, performance and durability of parts, operate this tool at 90psi (6.3kg/cm²) maximum air pre-sure at inlet with 3/8" (10mm) inside diameter air supply hose.
- For safety reasons, the tool must always be disconnected from the air supply during connection and adjustment work.
- Do not use damaged, frayed air hoses and fittings.
- Before sure all hoses and fitting are the correct size and are tightly secured.
- Always use clean, dry air at 90psi (6.3kg/cm²) maximum air pressure. moisture can ruin the motor of an air tool.
- Do not lubricate tools with flammable or volatile liquids such as kerosene, diesel or jet fuel.
- Do not remove any labels, replace Any damaged label.

USING THE TOOL

- Never work without protective goggles
- Always wear hearing protection when operating this tool.
- Be aware of the direction of rotation when operating the throttle.
- Keep hands, loose clothing and long hair away from rotating end of tool.
- Keep body stay balanced and firm. Do not over reach when operating this tool. High reaction torque can be occur at or below the recommended air pressure.
- Use power sockets only, For safe and economic use-replace worn sockets.
- This tool, together with any attachments and accessories, must never be used for anything other than the designed purpose.

SYMBOLS

	Caution				
This symbol identifies the potential for a hazardous situation. If this warning is not followed, a serious injury could occur.	This symbol identifies the potential for a damaging situation. If a caution note is not followed, the product or parts of the product could be damaged	Avoid direct skin contact when working with oil to prevent skin irritations	Always wear eye protection when operating or performing maintenance on this tool	Always wear hearing protection when operating this tool.	Recycling raw materials instead of disposing as waste.

OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

NOTICE

The use of other than genuine replacement parts may result in safety hazards, decreased tool performance, and increased maintenance, and may invalidate all warranties.

Repairs should be made only by authorized trained personnel.

For parts and service information, contact your local distributors.

PRODUCT DESCRIPTION

The pulse tool is a similar design to impact wrench, however with a integrated hydraulic oil pressure unit. Combination of torque control, forward/reverse operation. Low noise and low vibration.


TORQUE ADJUSTMENT

To adjust the torque on oil pulse tool, proceed as follows :

1. The cold weather could influence pulse oil quality. please reheat fastener 10-15times to warm up the oil then adjust torque screw.
2. Remove the adjustment hole plug.
3. Rotate the drive shaft until the torque adjustment screw is visible in the opening.
4. Use a hex wrench, rotate the adjustment crew clockwise to increase the torque output and counterclockwise to decrease the torque output. Do not rotate the oil plug. (with about 3-4 turns, set the desired torque)

NOTICE

PLEASE USE TORQUE TESTER FOR CALIBRATION AFTER TORQUE ADJUSTMENT

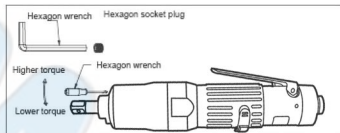

OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

COMPRESSED AIR SCHEMATIC



RECOMMENDED COMPRESSED AIR SYSTEM

Caution



Lubrication

While installing air compressor system, be sure to have filters, separators for oil and water, regulators, and lubricators to increase work efficiency, prolong the life of air tools and reduce maintenance cost.

Suggestion air hose size :

Main Line : 3 times air tool inlet size

Branch Line : 2 times air tool inlet size

To keep the best performance of tool, please install the air hose size correctly

NOTICE



3/8" I.D Hose

Ideal for increasing working distance in high CFM applications.

Q&A

Q : What is the air pressure and air hose size that I should use with pulse tool ?

A : The tools should be run at 90psi dynamic (This means that the air pressure should be checked with the tool running free speed) . The inside diameter of your air hose should be one size larger than the size of the air inlet of the tool.

Example : 1/4" NPT air inlet should be run on a 3/8" inside diameter air hose.

OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

INSPECTION AND MAINTENANCE

Placing tool in service :

1. Please install line with R.F.L unit (R-REGULATOR, F-Filter, L-Lubricator)
2. Air hose must be 3/8" inside diameter, don't use coil hose, it may affect torque stability.
3. Please check the air pressure before using. The air pressure should be 90psi in dynamic.
4. Ensure the air supply is clean and does not exceed 90psi during operation. Too high an air pressure and unclean air will shorten the product life due to excessive wear, and may be dangerous causing damage and/or personal injury.
5. Please check compressed air system everyday and keep it clean and dry.
6. Use proper connector, coupling, coupling, threaded connections and accessories.

Using tool in service :



1. Please lubricate tool daily to avoid wearing and rustiness. Running tool for 2-3 seconds after lubrication.
2. Always wear eye and ears protection when operating the tool
3. the bearing needs to be lubricated with LDS18 every 3 months.
4. Please follow the instruction for assembly or disassembly this tool
5. Please do not make any adjustment during operation. Please disconnect the air hose from air supply.
6. The use of other than genuine replacement parts may cause the damage of the tools.
7. Ues only impact socket and accessories. Do not use hand (chrome) sockets or accessories.
8. Be aware of the direction of rotation when operating the throttle.



OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

FLUID CHANGE

In order to avoid the costs of malfunction or maintenance increase, routine inspections are necessary.

When tighten fasteners, used in different ways can cause the time of change oil difference, so we recommend that user should assess the self-condition to adjust the time of change oil.

For example: Tighten hard joint fasteners about spending 0.5~1 second (pulse), tighten soft joint fasteners exceeds more than 1 second (pulse), the time of change oil will be different.

Pulse number: It means when the screws are exposed to tighten the object surface, the number of strokes that driven by hydraulic cylinder.

When tool spends less time to tighten the object; quickly achieve the required torque, the time of change oil (number) will be extended.

When tool spends more time to tighten the object; to reach the required torque, the time of change oil (number) will be increased.

When tool is used for high torque (less number of pulses), the time of change oil will be extended.


When tool is used for low torque (more number of pulses), the time of change oil will be increased.

NOTICE

On the narrative, we reserve the right to change, without prior notice.

IPW-2315A

3/8" SQUARE DRIVE AUTO SHUT OFF OIL PULSE WRENCH (ANGLE TYPE) -HIGH PRESSURE TOOL

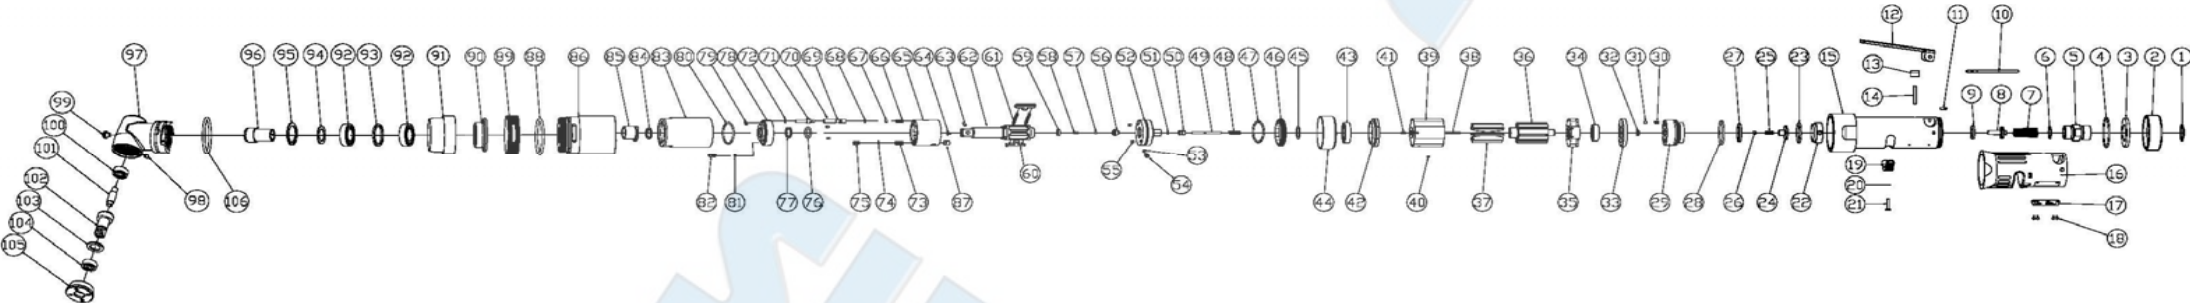

IPW-2315A

3/8" SQUARE DRIVE AUTO SHUT OFF OIL PULSE WRENCH (ANGLE TYPE) -HIGH PRESSURE TOOL

PARTS LIST

No.	Parts No.	Description	Q'ty	No.	Parts No.	Description	Q'ty
1	IP40900157032	Snap	1	54	IP30661220030	Adjust Screw	1
2	IP30480790160	Exhaust Block Set	1	55	IP41325047000	Pin	4
3	IP30480820000	Muffler	1	56	IP35242400030	Oil Return Valve	1
4	IP40300041010	O-Ring	1	57	IP40502500000	Ball	1
5	IP30460770030	Connect Set Fast-18NPT	1	58	IP35240930000	Oil Return Spring	1
	IP30460780030	Connect Set Fast-19NPT	1	59	IP35242380030	Oil Return Valve At	1
6	IP40300001010	O-Ring	1	60	IP30640320002	Drive Blade	2
7	IP30461190030	Spring	1	61	IP30090330000	Blade Spring	2
8	IP30461200210	Air Inlet Valve	1	62	IP35120310000	Main Shaft-D	1
9	IP30461270020	Washer	1	63	IP30501150000	Pin	1
10	IP30480440030	Suspension Loop	1	64	IP30501160000	Spring	1
11	IP41230250030	Pin	1	65	IP35120290000	Oil Hydraulic Cylinder	1
12	IP30070510110	Handle	1	66	IP35121070000	Spring	1
13	IP35040660000	Switch Place	1	67	IP40503000000	Ball	1
14	IP35040650030	Valve Axle Of The Switch	1	68	IP40300011010	O-Ring	1
15	IP35040170000	Straight Housing	1	69	IP35121080000	Control Core	1
16	IP35041830000	Rubber Grip	1	70	IP41315040000	Pin	1
17	IP35792410000	The Plate	1	71	IP35791220030	Adjust Screw	1
18	IP42117002000	Rivet	4	72	IP40300012010	O-Ring	1
19	IP35040640010	R.L Switch	1	73	IP35122460000	Temperature Control Valve Spring	1
20	IP30460740030	Washer	1	74	IP40340002011	O-Ring	1
21	IP30460750030	Screw	1	75	IP35242450030	Temperature Control Valve	1
22	IP30580970210	Rear Balanced Switch	1	76	IP30481250000	XO-Ring	1
23	IP40330015010	O-Ring	1	77	IP30221260210	XO-Washer	1
24	IP30490940030	Piston	1	78	IP35120280000	Liner Plate	1
25	IP30660930000	Spring	1	79	IP41215050030	Pin	2
26	IP40503500000	Ball	1	80	IP40300042010	O-Ring	1
27	IP30490920210	Washer	1	81	IP40300040010	O-Ring	1
28	IP40330017010	O-Ring	1	82	IP30221210030	Oil Screw	1
29	IP35040910000	Equilibrate The Switch	1	83	IP35120260030	Linet Casing	1
30	IP30080710000	Spring	1	84	IP30060360000	Washer	1
31	IP40503000000	Ball	1	85	IP30070090000	Bushing	1
32	IP40300018010	O-Ring	1	86	IP35790020220	Front Casing	1
33	IP35040960230	Wind Direction Plate	1	87	IP35242680000	Washer	1
34	IP40800001001	Bearing	1	88	IP40300130010	O-Ring	1
35	IP35160500110	Front Plate	1	89	IP35790630030	Lever Bushing	1
36	IP35120560000	Rotor	1	90	IP35791420030	Plate	1
37	IP35120490000	Blade	9	91	IP35792050030	Rubber Plug	1
38	IP41220160030	Pin	1	92	IP40800015000	Bearing	2
39	IP35040550110	Cylinder	1	93	IP30920100030	Washer	1
40	IP41220050030	Pin	1	94	IP30921440030	Washer	1
41	IP41220040030	Pin	1	95	IP40800015032	Snap	1
42	IP35240430110	Rear Plate	1	96	IP35791450000	Drive Gear	1
43	IP40800014000	Bearing	1	97	IP30921400100	90°Bending	1
44	IP35240390030	Connexion Sets	1	98	IP40204040030	Screw	1
45	IP35242430000	Driving Seat Gasket	1	99	IP41805050034	Screw	1
46	IP35240350030	Pressure Plate	1	100	IP40800007000	Bearing	1
47	IP40330039010	O-Ring	1	101	IP30921460001	Bushing Protector	1
48	IP35120950000	Spring	1	102	IP30921480000	Turning Shaft Gear	1
49	IP35162390000	Transmission Plate Piston Pole	1	103	IP30921490030	Washer	1
50	IP35241050030	Transmission Plate Piston	1	104	IP40800014000	Bearing	1
51	IP40340020011	O-Ring	1	105	IP30921510030	Bearing Cover	1
52	IP35120340220	Transmission Plate	1	106	IP40300036010	O-Ring	1
53	IP40300035010	O-Ring	2				



EC DECLARATION OF CONFORMITY

We: **SUMAKE INDUSTRIAL CO., LTD.**

4F, No. 351, Yangguang St., Neihu District, Taipei City, Taiwan

declare in sole responsibility that the equipment

Equipment : **3/8" SQUARE DRIVE AUTO SHUT OFF OIL PULSE WRENCH
(ANGLE TYPE) -HIGH PRESSURE TOOL**

Model/ Serial No. : **IPW-2315A**

to which this declaration applies, complies with these normative documents:

- Machinery Directive: 2006/42/EC

and conforms to the following EN standard,

- EN ISO 12100: 2010
- EN ISO 11148-6:2012

Name and Signature/Position



Mike Su – Managing Director

Date and Place

2024/12/9

Taipei, Taiwan

IPW-2315A-D-2503B-C5F

NOTE

SUMAKE®

SUMAKE®