




SUMAKE *PNEUMATIC TOOLS*

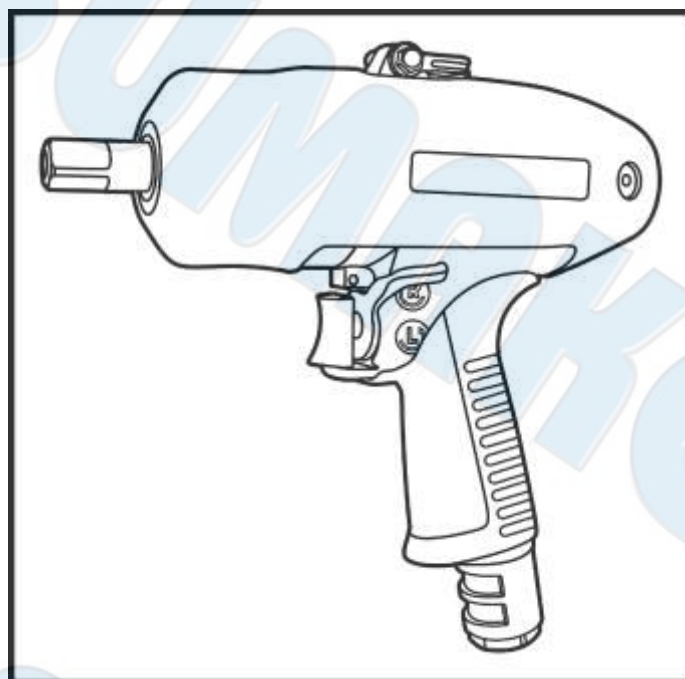

1/2" Square Drive Auto Shut Off Oil Pulse Wrench (Pistol Type) -Low Pressure Tool IPW-24125PL

Specification:

Free Speed	4,200 r/min
Square	1/2
Bolt Capacity	12 mm
Torque	85~145Nm(62.9~107.3ft-lb)
Overall Length	8-1/2" (215mm)
Air Consumption	17.7 CFM (500 L/min)
Air Inlet (PT)	1/4" (6.35 mm)
Air Hose (I.D.)	12.7 mm
Air Pressure	58~72.5 psi (4~5 bar)
Net Weight	5.07lbs (2.3kgs)

Noise and Vibration:

Vibration EN ISO 28927-2	Noise EN ISO 15744	Remark
Load: 3 m/s ² Uncertainty K= 1.5 m/s ²	Sound Pressure Level load: 85 dB(A)	Please always wear ear protector at environment noise level > 80 dB(A) due to risk of impaired hearing!
	Sound power level load: 96 dB(A)	
	Uncertainty K= 3dB	

SUMAKE INDUSTRIAL CO., LTD

4F,NO.351,Yangguang St.,Neihu District TAIPEI, TAIWAN, ZIP:114-91

IPW-24125PL-S-2307C-C5F

SUMAKE®

OIL PULSE TOOL



IPS(W)-I-1709D-C5

OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

**WARNING**

Read and carefully observe these operating instructions before unpacking and operating the tool! The tool must be operated, maintained and repaired exclusively by persons familiar with the operating instructions. Local safety regulations regarding installation and maintenance must be followed.

**INSTALLING TOOL**

- For safety, performance and durability of parts, operate this tool at 90psi (6.3kg/cm²) maximum air pre-sure at inlet with 3/8" (10mm) inside diameter air supply hose.
- For safety reasons, the tool must always be disconnected from the air supply during connection and adjustment work.
- Do not use damaged, frayed air hoses and fittings.
- Before sure all hoses and fitting are the correct size and are tightly secured.
- Always use clean, dry air at 90psi (6.3kg/cm²) maximum air pressure. moisture can ruin the motor of an air tool.
- Do not lubricate tools with flammable or volatile liquids such as kerosene, diesel or jet fuel.
- Do not remove any labels, replace Any damaged label.

USING THE TOOL

- Never work without protective goggles
- Always wear hearing protection when operating this tool.
- Be aware of the direction of rotation when operating the throttle.
- Keep hands, loose clothing and long hair away from rotating end of tool.
- Keep body stay balanced and firm. Do not over reach when operating this tool. High reaction torque can be occur at or below the recommended air pressure.
- Use power sockets only, For safe and economic use-replace worn sockets.
- This tool, together with any attachments and accessories, must never be used for anything other than the designed purpose.

SYMBOLS

	Caution				
This symbol identifies the potential for a hazardous situation. If this warning is not followed, a serious injury could occur.	This symbol identifies the potential for a damaging situation. If a caution note is not followed, the product or parts of the product could be damaged	Avoid direct skin contact when working with oil to prevent skin irritations	Always wear eye protection when operating or performing maintenance on this tool	Always wear hearing protection when operating this tool.	Recycling raw materials instead of disposing as waste.

OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

NOTICE

The use of other than genuine replacement parts may result in safety hazards, decreased tool performance, and increased maintenance, and may invalidate all warranties.

Repairs should be made only by authorized trained personnel.

For parts and service information, contact your local distributors.

PRODUCT DESCRIPTION

The pulse tool is a similar design to impact wrench, however with a integrated hydraulic oil pressure unit. Combination of torque control, forward/reverse operation. Low noise and low vibration.


TORQUE ADJUSTMENT

To adjust the torque on oil pulse tool, proceed as follows :

1. The cold weather could influence pulse oil quality. please reheat fastener 10-15times to warm up the oil then adjust torque screw.
2. Remove the adjustment hole plug.
3. Rotate the drive shaft until the torque adjustment screw is visible in the opening.
4. Use a hex wrench, rotate the adjustment crew clockwise to increase the torque output and counterclockwise to decrease the torque output. Do not rotate the oil plug. (with about 3-4 turns, set the desired torque)

NOTICE

PLEASE USE TORQUE TESTER FOR CALIBRATION AFTER TORQUE ADJUSTMENT

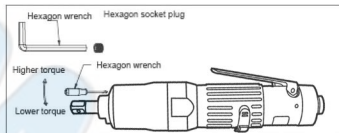

OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

COMPRESSED AIR SCHEMATIC



RECOMMENDED COMPRESSED AIR SYSTEM

Caution



Lubrication

While installing air compressor system, be sure to have filters, separators for oil and water, regulators, and lubricators to increase work efficiency, prolong the life of air tools and reduce maintenance cost.

Suggestion air hose size :

Main Line : 3 times air tool inlet size

Branch Line : 2 times air tool inlet size

To keep the best performance of tool, please install the air hose size correctly

NOTICE



3/8" I.D Hose

Ideal for increasing working distance in high CFM applications.

Q&A

Q : What is the air pressure and air hose size that I should use with pulse tool ?

A : The tools should be run at 90psi dynamic (This means that the air pressure should be checked with the tool running free speed). The inside diameter of your air hose should be one size larger than the size of the air inlet of the tool.

Example : 1/4" NPT air inlet should be run on a 3/8" inside diameter air hose.

OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

INSPECTION AND MAINTENANCE

Placing tool in service :

1. Please install line with R.F.L unit (R-REGULATOR, F-Filter, L-Lubricator)
2. Air hose must be 3/8" inside diameter, don't use coil hose, it may affect torque stability.
3. Please check the air pressure before using. The air pressure should be 90psi in dynamic.
4. Ensure the air supply is clean and does not exceed 90psi during operation. Too high an air pressure and unclean air will shorten the product life due to excessive wear, and may be dangerous causing damage and/or personal injury.
5. Please check compressed air system everyday and keep it clean and dry.
6. Use proper connector, coupling, coupling, threaded connections and accessories.

Using tool in service :



1. Please lubricate tool daily to avoid wearing and rustiness. Running tool for 2-3 seconds after lubrication.
2. Always wear eye and ears protection when operating the tool
3. the bearing needs to be lubricated with LDS18 every 3 months.
4. Please follow the instruction for assembly or disassembly this tool
5. Please do not make any adjustment during operation. Please disconnect the air hose from air supply.
6. The use of other than genuine replacement parts may cause the damage of the tools.
7. Use only impact socket and accessories. Do not use hand (chrome) sockets or accessories.
8. Be aware of the direction of rotation when operating the throttle.



OIL PULSE TOOL & TORQUE MEASUREMENT EQUIPMENT

FLUID CHANGE

In order to avoid the costs of malfunction or maintenance increase, routine inspections are necessary.

When tighten fasteners, used in different ways can cause the time of change oil difference, so we recommend that user should assess the self-condition to adjust the time of change oil.

For example: Tighten hard joint fasteners about spending 0.5~1 second (pulse), tighten soft joint fasteners exceeds more than 1 second (pulse), the time of change oil will be different.

Pulse number: It means when the screws are exposed to tighten the object surface, the number of strokes that driven by hydraulic cylinder.

When tool spends less time to tighten the object; quickly achieve the required torque, the time of change oil (number) will be extended.

When tool spends more time to tighten the object; to reach the required torque, the time of change oil (number) will be increased.

When tool is used for high torque (less number of pulses), the time of change oil will be extended.


When tool is used for low torque (more number of pulses), the time of change oil will be increased.

NOTICE

On the narrative, we reserve the right to change, without prior notice.

IPW-24125PL

1/2" SQUARE DRIVE AUTO SHUT OFF OIL PULSE WRENCH (PISTOL TYPE) -LOW PRESSURE TOOL

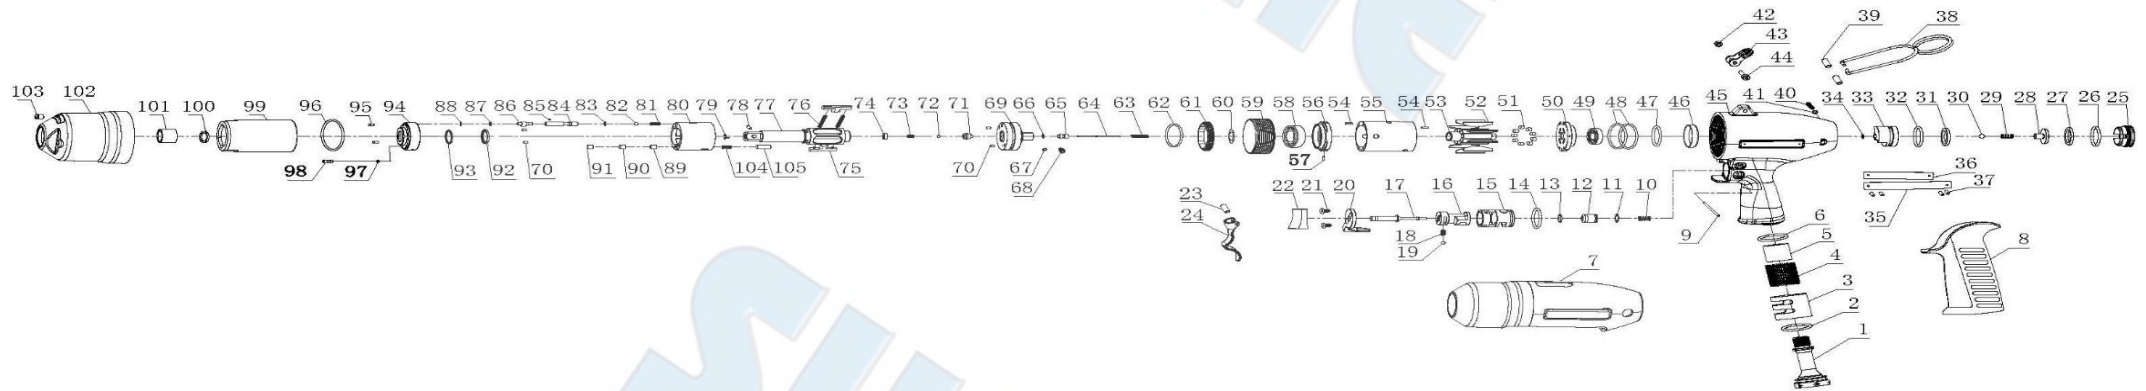

IPW-24125PL

1/2" SQUARE DRIVE AUTO SHUT OFF OIL PULSE WRENCH (PISTOL TYPE) -LOW PRESSURE TOOL

PARTS LIST

No.	Parts No.	Description	Q'ty
1	IP35691370030	Exhaust Body 19npt	1
	IP35691380030	Exhaust Body 18npt	1
2	IP40300108010	O-Ring	1
3	IP35690790000	Exhaust Block Set	1
4	IP35690810000	Exhaust Nets	1
5	IP35690820000	Muffler	1
6	IP40300109010	O-Ring	1
7	IP35662500000	A Gun Shaped Body	1
8	IP35691810010	Rubber Grip	1
9	IP41320280030	Pin	1
10	IP35720680000	Spring	1
11	IP40300002010	O-Ring	1
12	IP35720670000	Valve Cap Of The Switch	1
13	IP40310003010	O-Ring	1
14	IP40300108010	O-Ring	1
15	IP35720630030	Lever Bushing	1
16	IP35720620030	Reverse Valve	1
17	IP30080710000	Spring	1
18	IP40503000000	Ball	1
19	IP35720720030	Valve Rod	1
20	IP35720730030	R.L Lever	1
21	IP40103060030	Screw	2
22	IP35720690000	Throttle Grip	1
23	IP41230160030	Pin	1
24	IP35692570000	Throttle Grip	1
25	IP35690120030	Back Casing	1
26	IP40300026010	O-Ring	1
27	IP35691040000	Washer	1
28	IP35690940030	Piston	1
29	IP35690930000	Spring	1
30	IP40504500000	Ball	1
31	IP35690920000	Washer	1
32	IP40330016010	O-Ring	1
33	IP35690910000	Equilibrate The Switch	1
34	IP40300018010	O-Ring	1
35	IP35242410000	The Positive Plate	1
36	IP35662420000	The Negative Plate	1
37	IP42117001000	Rivet	4
38	IP35692370030	After The Rings	1
39	IP41245060030	Pin	2
40	IP35240990030	Screw	1
41	IP40300029010	O-Ring	1
42	IP42111001030	Screw Cap	1
43	IP31100440030	Suspension Loop	1
44	IP40104250030	Screw	1
45	IP35660180220	Pistol Housing	1
46	IP35661640070	Check Plate	1
47	IP40330007010	O-Ring	1
48	IP40300128010	O-Ring	2
49	IP40800049000	Bearing	1
50	IP35660500110	Front Plate	1
51	IP35631680000	Rubber Plug	9
52	IP35690490000	Blade	9

No.	Parts No.	Description	Q'ty
53	IP35660560000	Rotor	1
54	IP41230060030	Pin	2
55	35660550110	Cylinder	1
56	IP35660430110	Rear Plate	1
57	IP41220040030	Pin	1
58	IP40800023000	Bearing	1
59	IP35660390030	Connexon Sets	1
60	IP35662430000	Driving Seat Gasket	1
61	IP35660350030	Pressure Plate	1
62	IP40330012010	O-Ring	1
63	IP35660950000	Spring	1
64	IP35662390000	Transmission Plate Piston Pole	1
65	IP35241050030	Transmission Plate Piston	1
66	IP40340020011	O-Ring	1
67	IP40300091010	O-Ring	1
68	IP35602440030	Pulse Screw	1
69	IP35660340000	Transmission Plate	1
70	IP41329550000	Pin	4
71	IP35242400030	Oil Return Valve	1
72	IP40502500000	Ball	1
73	IP35242730000	Oil Return Spring	1
74	IP35242380030	Oil Return Valve At	1
75	IP35660320000	Drive Blade	2
76	IP30380330000	Blade Spring	2
77	IP35660310000	Main Shaft-D	1
78	IP31061150030	Pin	1
79	IP31061160030	Spring	1
80	IP35660290000	Oil Hydraulic Cylinder	1
81	IP35661070000	Spring	1
82	IP40503500000	Ball	1
83	IP40300029010	O-Ring	1
84	IP35661080000	Control Core	1
85	IP41320058000	Pin	1
86	IP35721220030	Adjust Screw	1
87	IP40300050010	O-Ring	1
88	IP35721330000	Spacer Sleeve	1
89	IP35692710000	Pressure Relief Valve Two	1
90	IP35692700000	Pressure Relief Valve	1
91	IP35693410000	Jam	1
92	IP30881250000	Xo-Ring	1
93	IP30301260210	Xo-Washer	1
94	IP35660280000	Liner Plate	1
95	IP41330060000	Pin	2
96	IP40330012010	O-Ring	1
97	IP40300029010	O-Ring	1
98	IP30401210030	Oil Screw	1
99	IP35660260030	Line Casing	1
100	IP31060360000	Washer	1
101	IP35600090000	Bushing	1
102	IP35660020220	Front Casing	1
103	IP40116280030	Screw	1
104	IP35692470000	Washer	1
105	IP35692720000	Pressure Relief Valve Three	1



EC DECLARATION OF CONFORMITY

We: **SUMAKE INDUSTRIAL CO., LTD.**

4F, No. 351, Yangguang St., Neihu District, Taipei City, Taiwan

declare in sole responsibility that the equipment

Equipment : **1/2" SQUARE DRIVE AUTO SHUT OFF OIL PULSE WRENCH
(PISTOL TYPE) -LOW PRESSURE TOOL**

Model/ Serial No. : **IPW-24125PL**

to which this declaration applies, complies with these normative documents:

- Machinery Directive: 2006/42/EC

and conforms to the following EN standard,

- EN ISO 12100: 2010
- EN ISO 11148-6:2012

Name and Signature/Position



Mike Su – Managing Director

Date and Place

2022/12/1

Taipei, Taiwan

IPW-24125PL-D-2307B-C5F

NOTE

SUMAKE®

SUMAKE®